



INSTALLATION OF WINDSOR STARTER

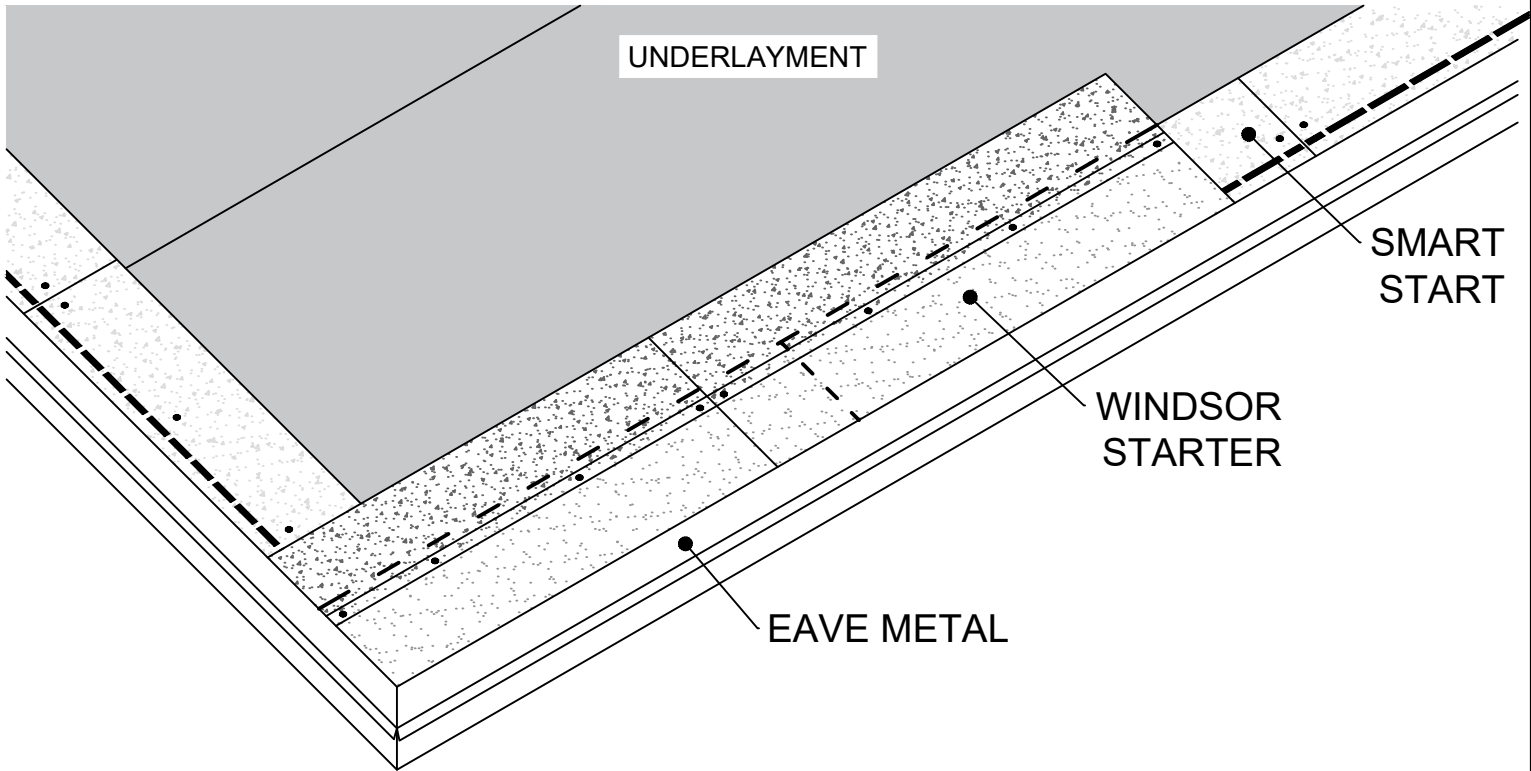

NOTES:

- SMART START STARTER SHINGLES REQUIRED ALONG EAVE; OPTIONAL ON RAKE BUT REQUIRED FOR CERTAIN WARRANTIES; OVERHANG EAVE METAL 1/4" - 3/4".
- CUT 6 3/8" FROM END OF FIRST WINDSOR STARTER; CONTINUE ACROSS ROOF WITH FULL-LENGTH SHINGLES.
- WINDSOR STARTER SHINGLES OVERHANG SMART START APPROX. 1/8".

STEEP SLOPE 10

	PROJECT NAME:	DATE:
	ADDRESS:	SCALE: NOT TO SCALE
	OWNER:	PROJECT NO:
		DRAWING NO. :
Rev. 5/18		SUBMITTAL NO. :