


TRANSITION FROM LOW SLOPE TO STEEP SLOPE ROOF

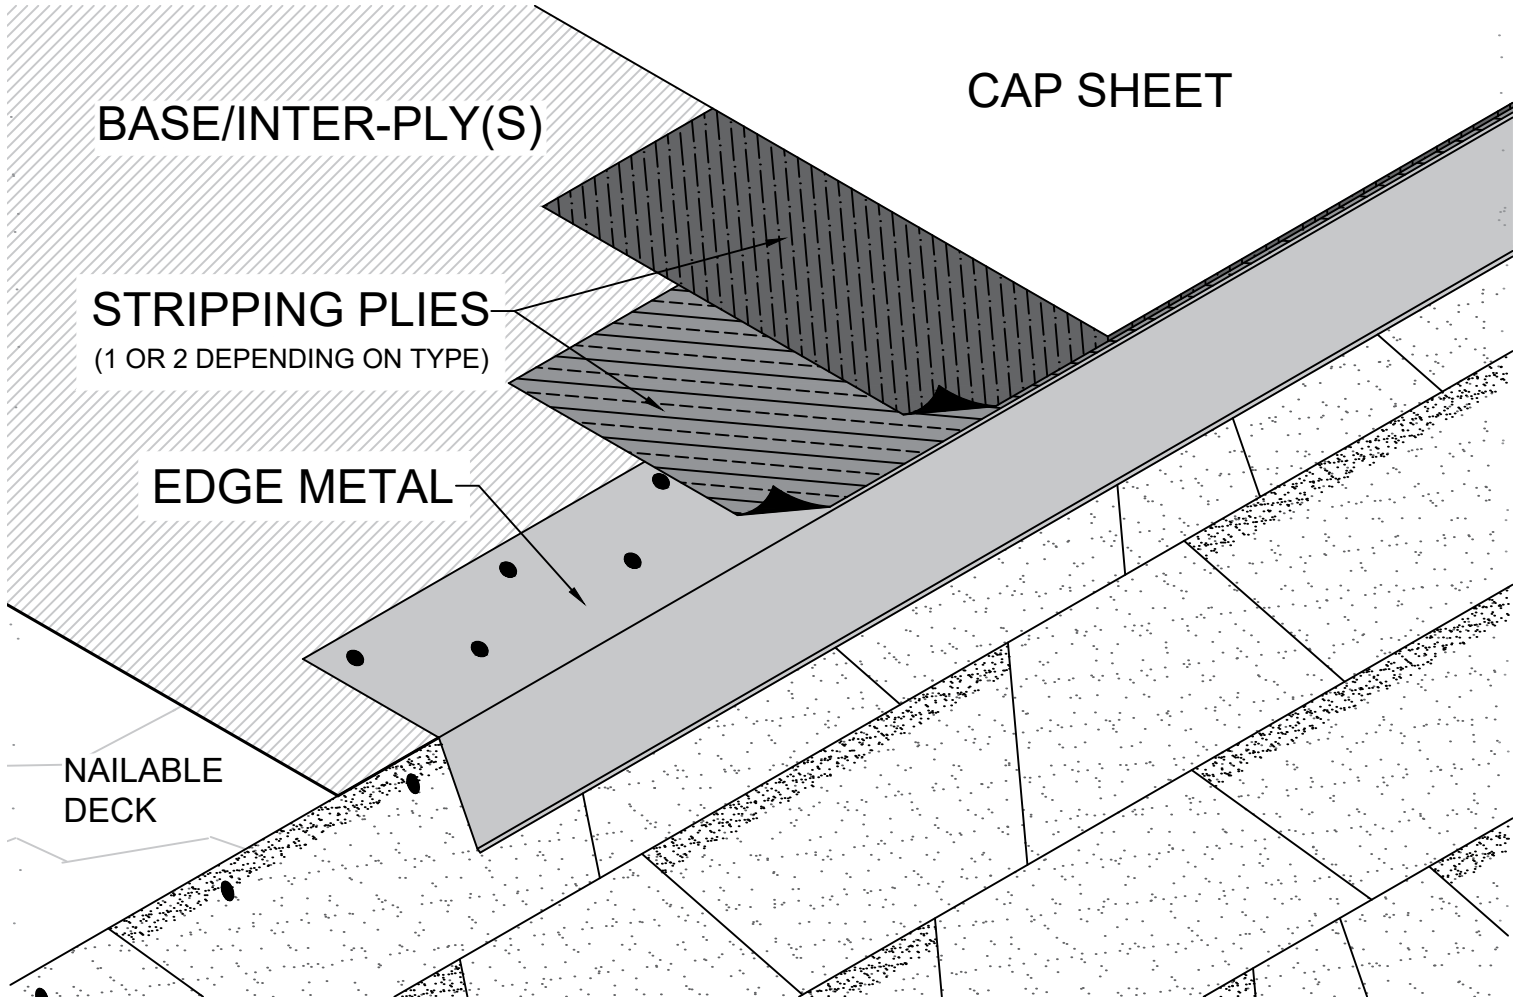

NOTES:

- ONCE SHINGLES IN PLACE, SET EDGE METAL IN MASTIC
- SECURE THE TOP FLANGE WITH ROOFING NAILS, STAGGERED IN 2 ROWS, 6" (152mm) O.C.
- LIGHTLY PRIME METAL TO AID ADHESION
- ADHERE STRIPPING PLY(S) OVER EDGE METAL: FIRST IS 7" (178mm) WIDE AND SECOND, 10" (254mm) WIDE WHERE APPLICABLE

LOW SLOPE 11



Rev. 5/18

PROJECT NAME:

ADDRESS:

OWNER:

DATE:

SCALE: NOT TO SCALE

PROJECT NO:

DRAWING NO. :

SUBMITTAL NO. :